

USER MANUAL • ELECTRIC VEHICLE

CABIN PRO

Operation • Safety • Care



Motor	Electric motor
Battery	Gel lead-acid
Edition	English • 1.0

Read in full before first use. Keep with the vehicle and pass it on with the vehicle.

01 / URBAN HOPPER

Vehicle & dealer

To be completed by the supplying dealer.

Model	Urban Hopper Cabin Pro
-------	------------------------

Vehicle identification number (VIN)

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

Copy from the vehicle and check against the vehicle documents.

Handover date	Odometer

Dealer stamp / contact details

--

Dealer name / signature: _____

This manual covers different control and charging versions. Use only the combination fitted to the vehicle. Have the brakes, battery and charging equipment identified at handover.

Ask the dealer to clarify safety-related differences before use. Do not find out by trial and error.

Importer / responsible economic operator in the EU

STW GmbH · Adam-Opel-Str. 12
60386 Frankfurt am Main · Germany
info@stwtuning.de · +49 69 4089908-0

Contents

Chapter	Page
Vehicle & dealer	2
Use & safety	4
Checks before use	5
Vehicle and operation	6–14
Battery, charging and storage	15–17
Care, tyres and troubleshooting	18–20
In an emergency or accident	21
Transport and take-back	22
Inspection and service records	23
Service and reporting a problem	24

WARNING identifies a hazard that may cause serious injury or death. Follow the corresponding protective instruction.

Use & safety

The Cabin Pro is intended for two people and level roads. Do not use farm tracks, rough terrain or kerbs. Observe the load limits of the actual version.

Do not overload. Observe the permitted seating and load limits of the actual version. Carry people only on seats intended and approved for that purpose.

Safe operation

- Obtain instruction before first use and practise in a suitable area away from public traffic.
- Do not drive under the influence of alcohol or drugs, when tired or while affected by medication. Do not operate phones or multimedia while driving.

Eligibility and road use

Identify the approved version from the vehicle documents. Before using public roads, establish the required driving licence or certificate, minimum age, insurance and plates/registration. Observe local rules. Ask the dealer or relevant authority if uncertain. Instruction does not replace a required licence.

Protection and unauthorised use

Fasten any fitted seat belts. Wear firm footwear and clothing that does not obstruct the controls. Observe applicable helmet and seat-belt requirements.

The vehicle is not a toy. Children must not drive it or play with the vehicle, charger or keys. Secure it against unauthorised use.

03 / URBAN HOPPER

Checks before use

Inspect the entire vehicle before first use. Check the agreed delivery contents, visible transport damage and loose, missing or incompletely fitted parts.

Check before every drive

- Tyres and wheels: damage, loss of pressure and wear. Ask the dealer for the correct pressure if no clear specification is provided.
- Brakes, drive controls and steering: safe operation, free return and unobstructed movement. Keep the footwell clear.
- Check lights, indicators, brake lights, horn and displays.
- Adjust mirrors; check the seat, belts, doors and fitted latches. Secure luggage or cargo.
- Check battery charge and visible cables and connections. Fully disconnect the charger before driving.



WARNING

Do not drive if parts are damaged, safety-critical parts are missing, functions fail or safety is uncertain. Contact the dealer or a qualified workshop. Do not drive the vehicle to the inspection while its safety is uncertain.

We recommend inspection by a qualified workshop before first use. Have fasteners checked and, where necessary, tightened by a competent person to the manufacturer's specifications. Do not tighten indiscriminately.

User checks do not replace correct assembly or a pre-delivery inspection.

Vehicle and lights



Front and rear lights.

The overview shows daytime running lights, indicators and main/dipped beam, plus rear brake and tail lights, reversing light, camera, plate light and rear fog light.


Check all safety-related lights before driving. Keep windows and mirrors clean. Do not drive with failed brake lights or inadequate visibility.

04 / URBAN HOPPER

Instrument and indicators



Instrument display, upper part.

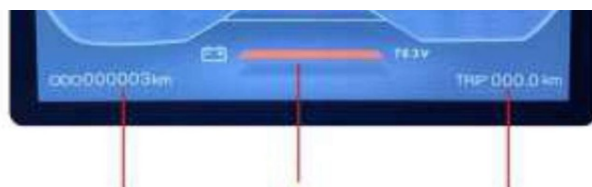

Mileage and charge display.

No.	Display
1 / 2	Indicators / main-dipped beam
3 / 4 / 5	Temperature / volume / multimedia
6 / 7	Speed / drive position
8 / 9 / 10	Odometer / battery / trip

04 / URBAN HOPPER

Drive selection and starting



Handlebar drive selector, where fitted.

Depending on version, use the handlebar selector or rotary selector. D = forward, N = neutral, R = reverse. Use only the fitted control.

- Check the parking restraint and select N. Turn ignition ON and wait for normal indications.
- Hold with the service brake, select direction and release the parking restraint only before moving off. Apply drive gently.

**WARNING**

Neutral is not a parking restraint. The vehicle can roll even when no drive direction is selected.

04 / URBAN HOPPER

Brakes and parking restraint



Mechanical parking brake, where fitted.

The model documents describe throttle/hand levers or pedal controls depending on equipment. Reduce drive and apply the fitted service brake progressively to slow down.

Pull up the parking lever. Press its front button and lower it completely to release. On versions with an additional handlebar parking latch, release that too.

**WARNING**

Do not drive with brakes applied. Do not move off if the brake indicator unexpectedly remains on or the parking restraint is unclear.

Switches, wiper and heating



Panel: ignition, washer, lights, heating and ventilation.

ON switches ignition on and OFF off. Labelled switches control the wiper, washer, heating, ventilation and rear fog lamp. Use the combination switches actually fitted for lighting and indicators.

- Do not use the wiper on a dry or frozen windscreen. Refill washer fluid only at the intended filler.
- Switch off comfort functions when leaving and ensure clear visibility before driving.

04 / URBAN HOPPER

Seats, doors and windows



Backrest and seat slide adjustment.

- Lift the recline handle and set the backrest angle. Operate the slide handle and move the seat. Engage the lock securely afterwards.
- Unlock with the remote or key and pull the exterior handle. Pull interior handle 1 to open.
- Press window switch 2 to lower and pull to raise.

**WARNING**

Adjust the seat, backrest and mirrors only while stationary. Check that everything is securely locked after adjustment.

04 / URBAN HOPPER

Glass roof and rear window



Interior controls and opening glass roof.

Glass roof: release the hinge and carefully push the roof up. Push the tensioning latch forward to hold it open. Return it to its original position to release.

Rear window: release the hinge, push the window out and move the latch down. Return the latch to release.



WARNING

Keep hands and objects clear of hinges and closing paths. Check secure positioning before driving.

04 / URBAN HOPPER

Multimedia, USB and remote



USB-Port

Multimedia unit and USB socket.

- Hold the multimedia button for three seconds to switch on/off. Press briefly to select media, radio and Bluetooth.
- Select Bluetooth and search on the phone; the model manual names AONEW. Pair only while parked.
- The source supports USB media up to 64 GB. Do not watch videos while driving.

Remote: open-lock symbol unlocks and closed-lock symbol locks. The source says the middle button has no assigned function.

04 / URBAN HOPPER

Main switch and parking



Main switch.

The model manual describes down = battery disconnected from the vehicle and up = connected. Check actual markings because other models use different switches.

- Stop completely on firm, level ground. Apply fitted parking restraints and select N. Switch off ignition and loads and remove the key.
- Lock the doors. Switch off the main switch for extended parking and check secure standing.

The source locates the plate on the right of the cab and VIN beneath the rear seat. Check the number against vehicle documents.

05 / URBAN HOPPER

Battery & safe charging

The model manual describes gel lead-acid or sealed lead-acid batteries. Do not top up water or open the battery seals.

**WARNING**

Throughout charging, an instructed person must be awake, present and able to monitor the process. Do not charge while away or asleep.

- Use only the charger assigned to this vehicle and battery. A matching plug or nominal voltage alone is not sufficient.
- Inspect visible battery and charger parts, cables and plugs before charging. Do not use damaged, deformed or unusually hot components.
- Charge in a dry, well-ventilated place. Place the charger securely on a non-combustible surface; do not cover it. Keep children, combustible materials, sparks and flames away. Keep escape routes clear.

Source charging temperature: 0–35 °C. Avoid direct sun and moisture and do not charge in snow or rain. Use a dry, ventilated location.

- Use a suitable, properly installed socket. Check the supply voltage against the charger's input rating.



Additional charging guide. It does not replace the correct charging instructions.

urbanminushopper.de/pages/elektrofahrzeug-laden

05 / URBAN HOPPER

Charging step by step

Follow the safety instructions on the previous page. Park on firm, level ground and secure the vehicle against rolling. Switch off the ignition and other loads; remove the key.

Charging procedure

- Identify the charging version: external charger or cable to an onboard charger. Use only the assigned original charger/cable.
- Open the charging-port cover. First connect the assigned charger's output plug to the vehicle.
- Only then connect the mains plug to a suitable socket.
- External charger: red means charging, green means complete. For an onboard charger, the model manual describes red, yellow and flashing green as charging stages; only steady green means fully charged.
- After charging, unplug the mains first, then disconnect the vehicle plug. Pull the plug, not the cable, and close the port cover.

The model manual limits a charging session to 12 hours. Disconnect after the indicated end of charging; do not force a minimum number of hours.



WARNING

Do not drive with the charger connected. Stop charging if there is unusual heat, smell, deformation or a fault. Disconnect power only if safe; keep away and call 112 if there is smoke or fire.

05 / URBAN HOPPER

Battery care & storage

Do not open, dismantle, modify or rewire the battery. Removal, replacement and work on internal connections require a competent professional. Never bypass protective circuits.

During use

Check charge regularly, avoid deep discharge and recharge promptly after use. Do not leave the vehicle with a discharged battery.

Extended storage

Store cool and dry with a charged battery, secure against rolling and switch off electrical loads. Supervise every recharge and do not leave the charger permanently connected.

During prolonged storage, check charge weekly and recharge in good time; do not store the battery discharged. Recharge no later than approximately 30% remaining charge on the display. Observe the installed battery instructions.

Set the main switch OFF for extended parking. Have battery removal performed by qualified personnel.

Returning to use

Clean and inspect the vehicle. Check tyres, brakes, steering, lights and latches, and check battery charge. After prolonged or uncertain storage, or if anything is abnormal, arrange professional inspection before charging or driving. Only test slowly in a suitable area once safety is established.

Care & professional checks

Cleaning

Switch off, remove the key and disconnect the charger. Clean surfaces with a soft, slightly damp cloth. Keep liquids out of electrical components. Do not use pressure or steam cleaning. Keep braking surfaces and tyres free of oil and grease.

Arrange regular professional checks

We recommend regular checks of the brakes, steering, running gear, wheels, structural parts, electrical cables and safety-critical fasteners by a qualified workshop. Agree inspection intervals according to use and condition; follow any model-specific requirements.

Have the rear axle and brake system checked by qualified personnel. Oil, quantity and tightening torques must match the assembly. DOT 4 is specified for the described brake system; observe the reservoir label and MIN/MAX marks. Work is for qualified personnel only.



WARNING

Do not open the battery, charger, motor or controller or bypass safety functions. Safety-critical repairs and adjustments require competent personnel and the correct documentation.

After an accident, impact or safety-related abnormality, stop using the vehicle until it has been checked and faults rectified. Have work recorded.

06 / URBAN HOPPER

Tyres, brakes & wear

Item	Model-source value
Front / rear pressure, normal	2.5 / 2.5 bar
Loaded, according to source	3.0 / 3.0 bar

- Check pressure only with cold tyres. Have damaged tyres, air leaks, cracks, embedded objects and deformed rims checked and repaired before driving again.
- Replace worn tyres in good time. Have the running gear and brakes checked for uneven wear, vibration or pulling to one side.
- Check braking performance and free return before every drive. Stop driving if stopping distances increase, fluid leaks or unusual noises occur; contact a workshop.
- Use only tyres, brake parts and spare parts suitable for the actual version. Do not guess fastener, brake-fluid or adjustment specifications.

Values from the corresponding model manual. Resolve any conflicting labels or equipment before use.

Troubleshooting safely

Carry out only the following external checks yourself. Stop driving if a safety-related fault occurs. Do not modify internal wiring, contacts or protective circuits.

Observation	Safe first step
Display remains off	Check the ignition/start control and intended user control of the main switch. If still off: contact service.
No drive	Secure the vehicle. Check the described start procedure, selected direction and release of the parking restraint. Do not force movement with the accelerator.
Low power or range	Check charge, load and tyre pressure. Charge only an undamaged, normal battery using the correct instructions.
Charging fault	Stop charging and disconnect only if safe. Inspect external cables and plugs. Contact service if damaged or the fault remains.
Sudden power loss	Stop safely. Do not repeatedly reset fuses or switches. Have the cause professionally investigated.



WARNING

Do not recreate brake, steering, drive-control or battery faults through risky test drives. Untrained users must not repair the charger or test the controller.

Report the model, fault description and, where available, VIN, mileage and photographs to the service team.

In an emergency or accident



WARNING

Keep away if there is smoke, fire or rapidly increasing heat. Warn others, leave the danger area and call the fire service on 112. State that an electric vehicle and its battery are involved.

- Do not inhale smoke or escaping gases. Do not touch, open or remove the battery.
- Do not move or transport a smoking, burning or very hot vehicle or battery yourself.
- Disconnect power only if you can do so without approaching the hazard or putting yourself at risk.
- After an accident, water ingress or visible damage, stop driving and do not recharge. Arrange professional inspection.

Report a safety problem

Also report non-urgent safety problems to the dealer or Urban Hopper service. Describe unusual heat, smell, smoke, rolling or brake and steering problems. The complaint form is not an emergency service.

08 / URBAN HOPPER

Transport & take-back

Transporting the vehicle

Agree transport, loading and securing with the dealer or a suitable transport company beforehand. Do not drive to the workshop with a safety-related defect.

- Use suitable loading equipment and confirmed lifting/tie-down points. Do not lift or secure by mirrors, steering, body panels or the roof.
- No one may remain in the vehicle during transport. Secure loose parts and cargo.
- Do not independently send damaged batteries as ordinary parcels. Report the damage before transport or return.

Return batteries separately

Waste batteries must not be placed in household waste. The crossed-out wheeled bin means separate collection. Do not dismantle the battery. Contact the seller or Urban Hopper service for an appropriate return route.

Report damage, leakage or unusual heating in advance. Return the vehicle, battery and charger under the arrangements applicable to each.

09 / URBAN HOPPER

Inspection & service records

Have the dealer or workshop record inspections and work carried out.
Keep receipts and reports.

Date / km	Work / findings	Workshop / stamp

Next recommended inspection

Datum / Date: _____

km: _____

These entries record work carried out. Statutory rights remain unaffected.

Service and reporting a problem

A fault, transport damage or missing part? We will review your report through the form and discuss the next steps.



Scan the QR code or enter the address in your browser.

urbanminushopper.de/pages/reklamation

Describe the model and fault. The order number, VIN, mileage and photographs help identify the issue. You may also send photographs and documents by email.

You can report an issue without all documents and also by email or telephone. Discuss any return or collection in advance. In an emergency, call emergency services.

Statutory rights concerning defects

Your statutory rights concerning defects apply against your seller. This manual does not restrict those rights. Using the form is not a condition for exercising them.

About this manual

This manual has been prepared carefully and to the best of our knowledge using the available manufacturer and supplier documents, with editorial additions. Errors or unclear information may nevertheless occur. Please report them through the complaint form, by email or telephone, ideally stating the model, manual version and page.

Where safety-related information is unclear, do not use or charge the vehicle until clarified with the dealer or a qualified workshop. Statutory rights and liability remain unaffected.

Sales and service: G&C Handels GmbH & Co. KG
Josef-Bautz-Straße 26 · 63457 Hanau · Germany
info@urbanminushopper.de · +49 6181 36983-50